

# Touch Panel Device driver setting manual

## For ARM

### Supported Operating Systems

- Ubuntu 20.04 aarch64

### Installation

1. Open terminal
2. Run the following commands to install the driver.

```
# xhost si:localuser:root
```

```
# sudo sh setup.sh
```

```
# reboot
```

## Uninstallation

1. Open terminal
2. Run the following commands to uninstall the driver.

```
# sudo sh remove.sh
```

## Touch Utility

### **Run touch utility method 1**

1. Open the Activities overview by clicking Activities at the top left of the screen, or press Windows key on your keyboard to open Dash menu.
2. Then type touchtool.
3. From the results, click on touchtool.

### **Run touch utility method 2**

1. Open terminal
2. Run the following commands to start touch utility.

```
# Touchpack
```